

Label Unwinder

The unwinder can be used with any type of label printer.
The unwinder is positioned behind the printer in case the printer does not include a place to store the labels.
It has an external power supply and an electronic circuit controls all the functions.
When the roll runs out, the unwinder stops by uttering an acoustic signal.
The tension arm adjusts the rotation's speed. When it is up, the unwinder turns at full speed, while when it is down, the unwinder is motionless.

Model R1000LU

Features

Left Unwinder
Roll Diameter up to 9.85"
Speed 120rpm
Label Width up to 4.73"
Core Size from 1.65" up to 4.65"
Power supply 115/18 Vac

